




- 
1. Remove the Passenger Back Rest
 2. Remove the 4 screws along the top rear and two screws on each side of the top piece of tupperware.
 3. The top piece is a bear to remove. First gently pry out and up to lift the front corner until it is out of the slot. Now the back can be coxed out.
 4. Repeat for the other side.

- 
1. Insert screwdriver and pop off the rod. Remove the two screws behind the rod. Put the rod back onto the ball mount.
 2. Repeat on the other side.
 3. Remove the three top screws on the back fender and let it drop down.
 4. Remove the three screws from each Tail light assembly and remove the tail lights.



Remove the right speaker assembly by removing these three screws. Let the speaker assembly just rest out away from the side of the trunk.

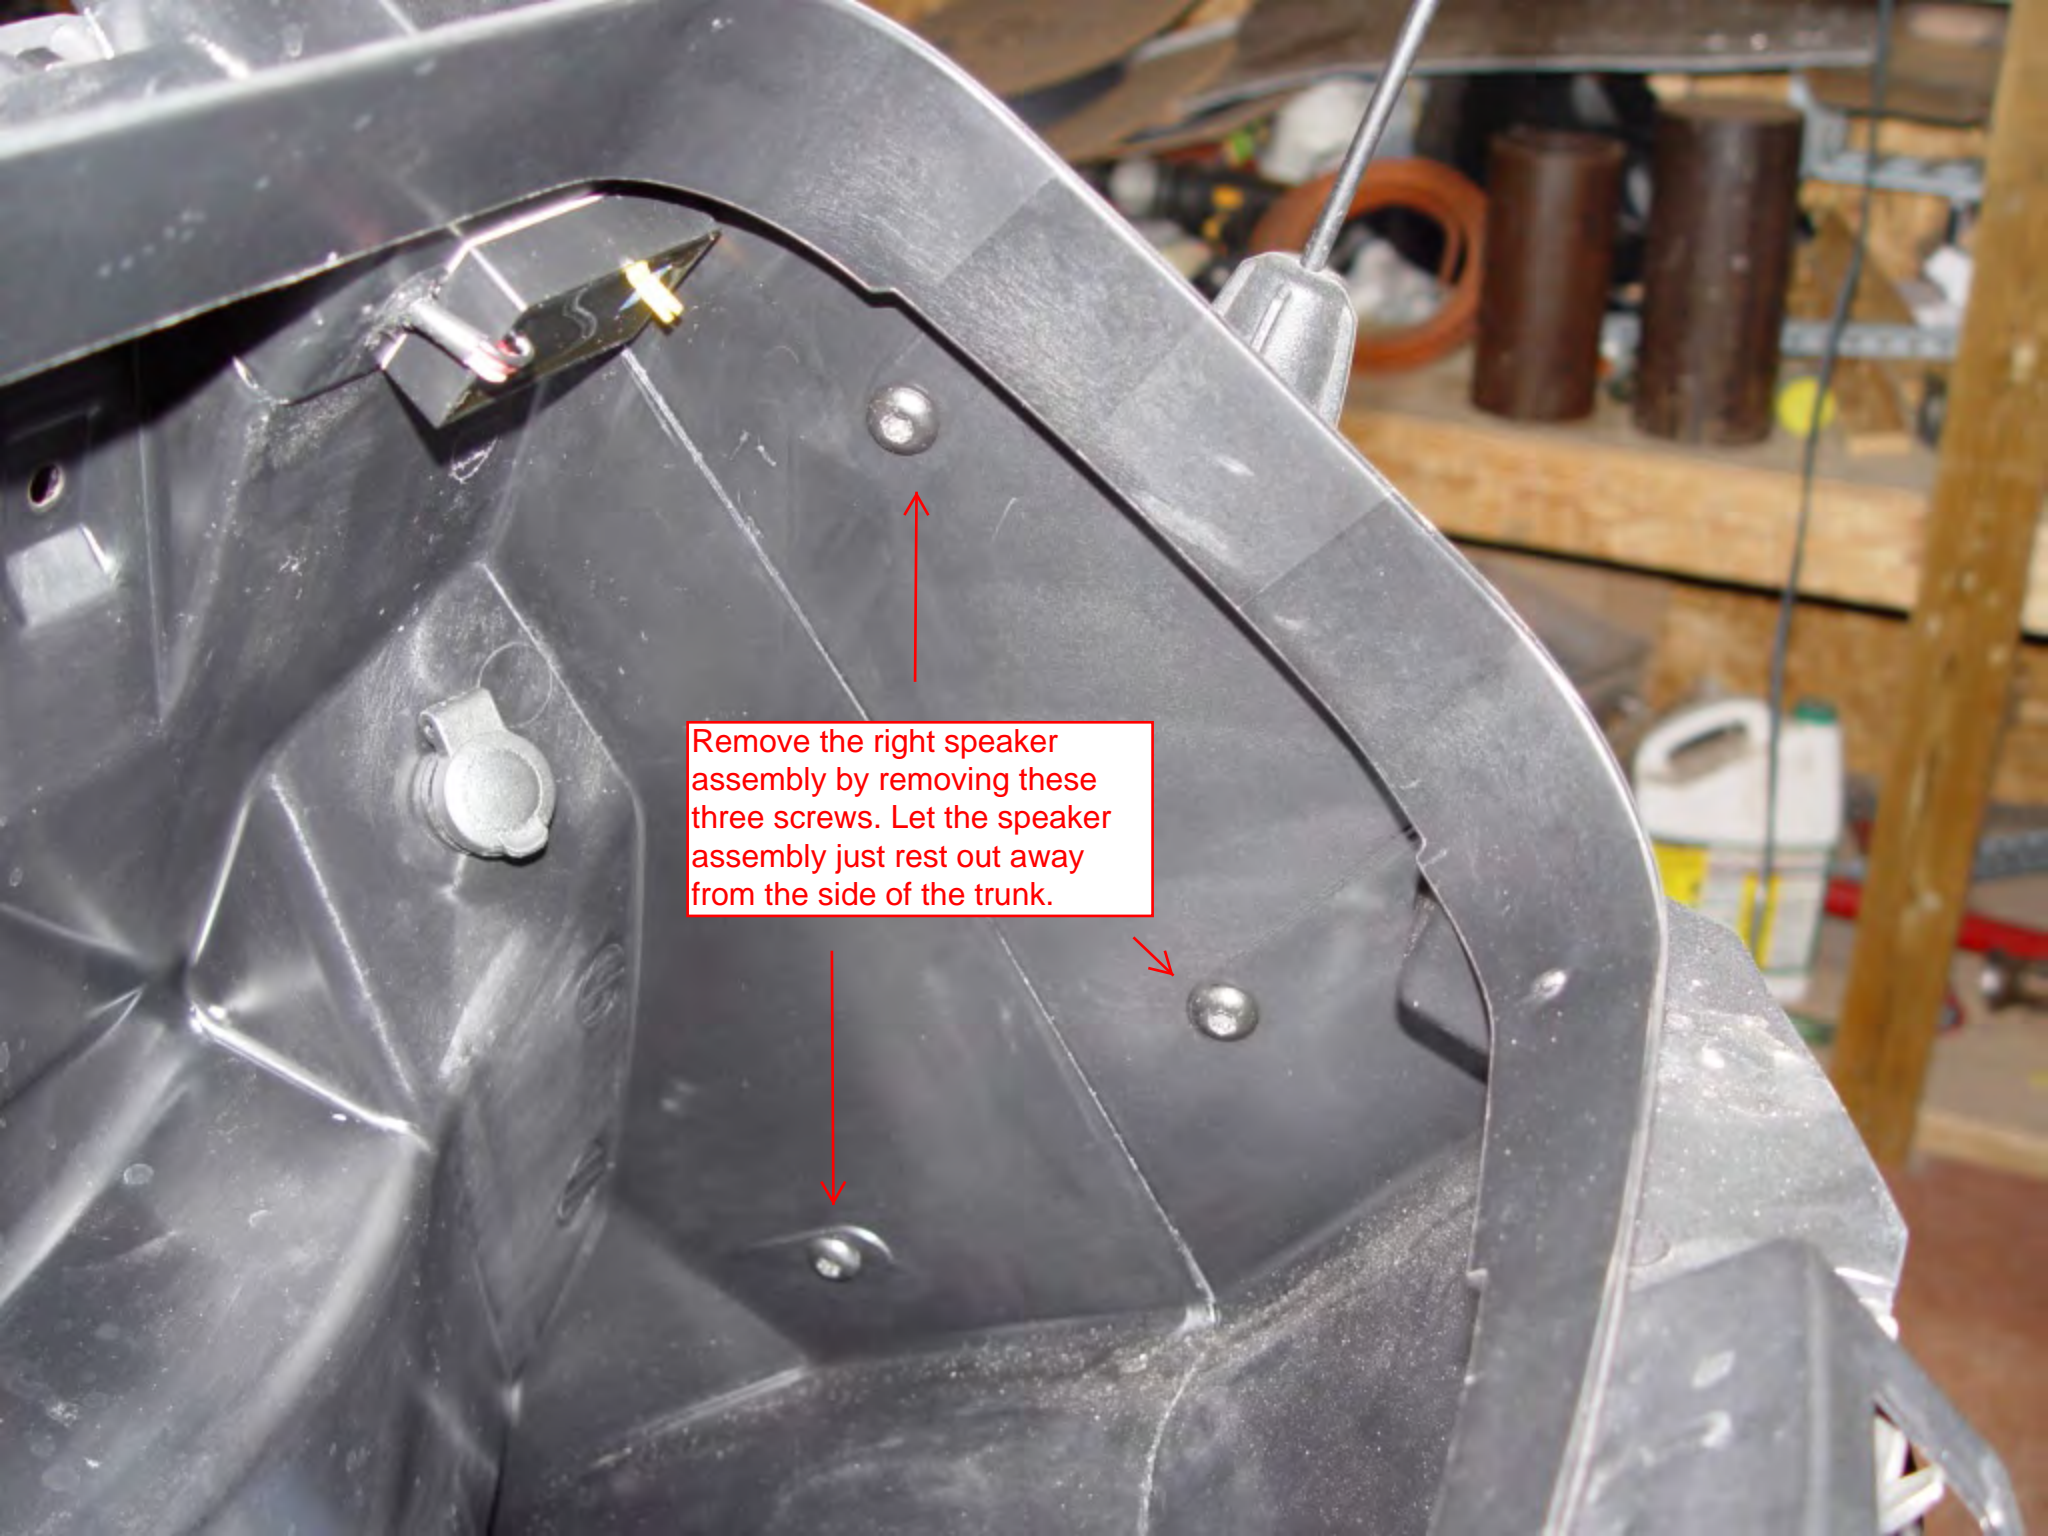

Clean this area
with alcohol

Don't worry about the sticky pad
right now.

Drill a 3/8 (9.5mm) hole in the approximate location. Deburr the front and back of the hole. Use wood stick to aid in installing the grommet into the hole. Make sure the the lips of the grommet are flat against the plastic on both sides. Insert the screwdriver (round shaft type) thru the grommet. Use it to seat the grommet in the hole (presses the grommet to the edge of the hole).






1. Install the Dongle on back wall. Keep it as high as possible but still able to get your finger in to press the release tab.
2. Remove the dongle and install the Cables as shown.
3. Install sticky pad as shown.
4. Separate the two cables. Take the cable with the 3 contacts on it and push them thru the grommet. Once all three are thru the grommet carefully pull the rest of the cable thru the grommet as shown. Use rubbing alcohol as a lub to get the heat shrink thru the grommet(DO NOT use grease).
5. Do the same thing for the 2 contact cable.
6. Now adjust the two cables so they appear as shown and tie wrap to the sticky pad.



1. Clean the grommet and the two cables with rubbing alcohol and let dry. Use RTV silicone adhesive sealant to seal around the two cables and the grommet.
2. Install tie wraps as shown. lightly tighten the one closest to the grommet. The two dangle cables will follow the gray cable.

Continue to tie wrap the two dogle cables to the gray cable.






Using the pointy end of the large tie wrap or stiff wire, route it as shown until it comes out the back as shown on the next page

Mtouch
Radio
PN 718 981 111
20121208
SN 11005

WARNING
Clean filler cap before removing.
Use only DOT 4 brake fluid from
a sealing container.

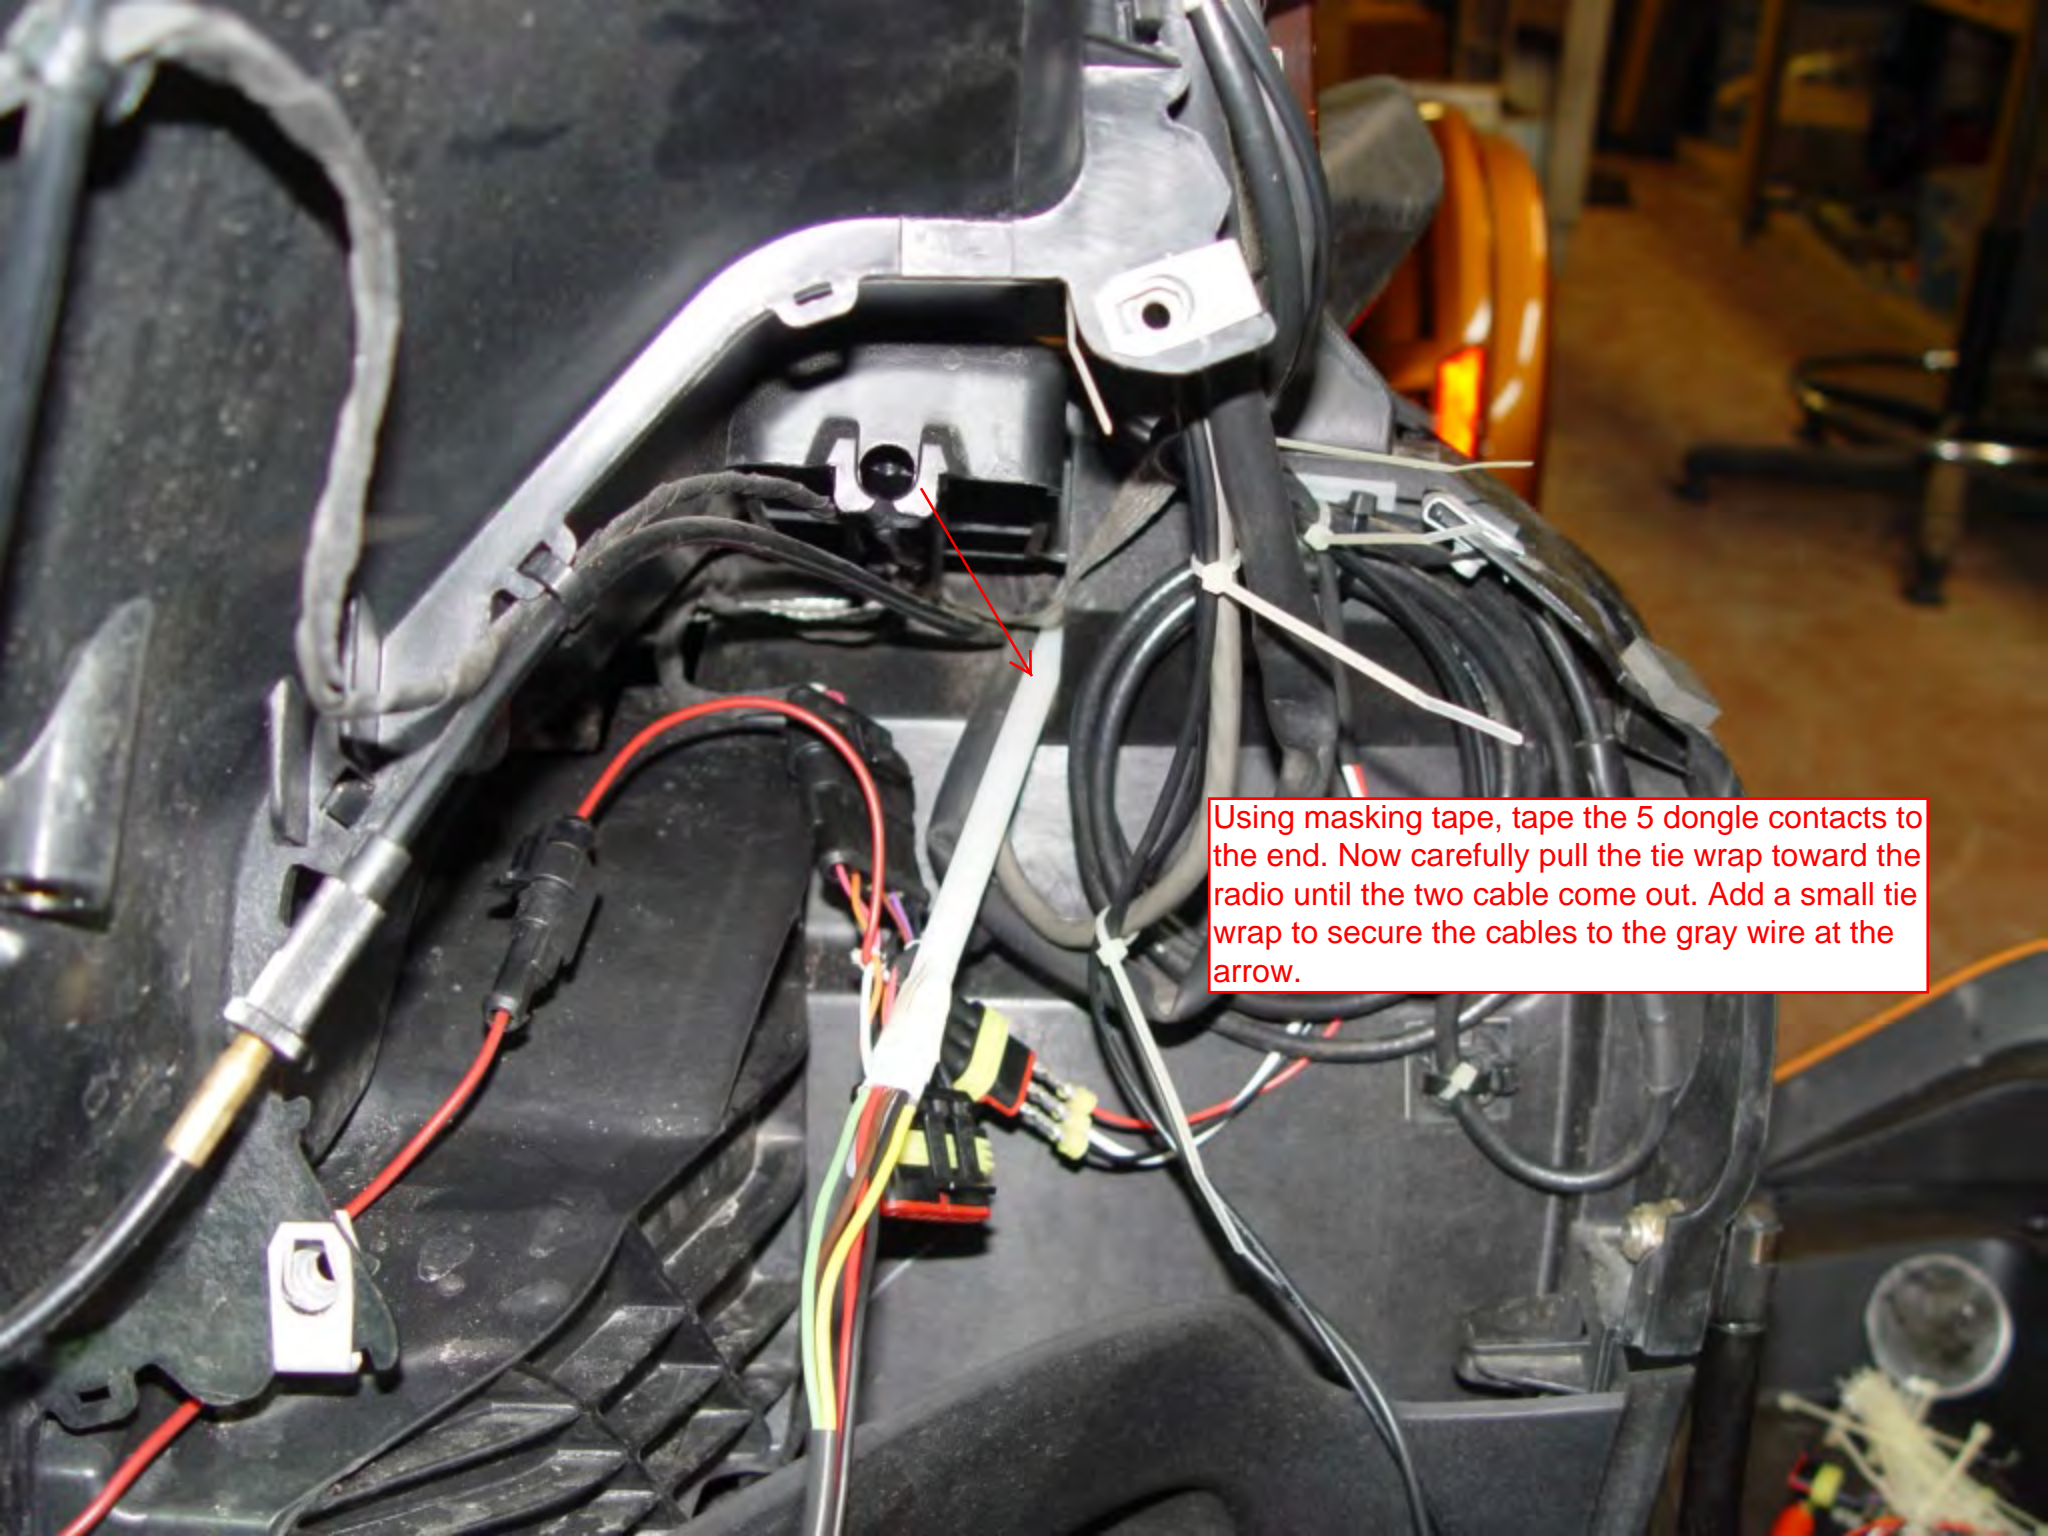

Using masking tape, tape the 5 dangle contacts to the end. Now carefully pull the tie wrap toward the radio until the two cable come out. Add a small tie wrap to secure the cables to the gray wire at the arrow.

Route the large tie wrap under the radio as shown. Retape the contacts onto the end of the tie wrap and carefully pull the two cables under the radio.



Mtouch
Radio
PIN 750 004 711
20131206
SN 12345
© 2014

Now route the end of the cable under the big harness here.



Insert the dongle contacts into the connector block as shown. Push them in as far as they will go. Now look at the face of the connector. you should see the contacts touching the back of the plastic face. If it isn't you need to push it in again until it is seated.



1. Push the two white plastic tabs until they are flush. This locks the contacts into the connector block.
2. You can now remove the rubber cover from the radio and install the connector. Connector release tab and two slots are on the bottom.
3. Your done.

